

Quick Start Guide







Introducing

HMD-M200 brings you the latest in voice- activated, hands-free, remote collaboration and data capture technology with the world's first pocket-sized wearable computer, extending the reach and capabilities of your workforce and turning any user with a HMD-M200 headset into a virtual expert.

HMD-M200 improves communication and collaboration by creating a digitally-enabled workforce. Teams can collaborate in real time to make smarter, safer, and faster decisions, resulting in increased productivity, improved safety, optimized workflows, and reduced costs. HMD-M200 can be used across a range of industries empowering frontline workers from the field to the operating room.


Device overview

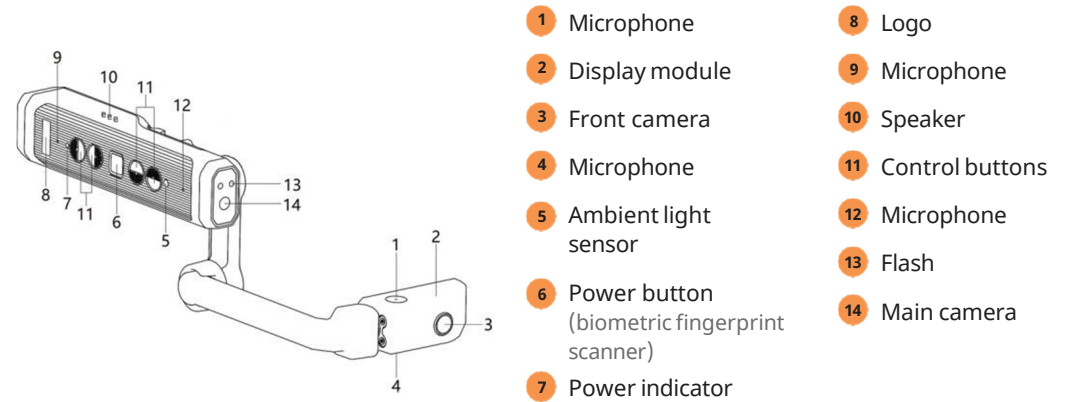

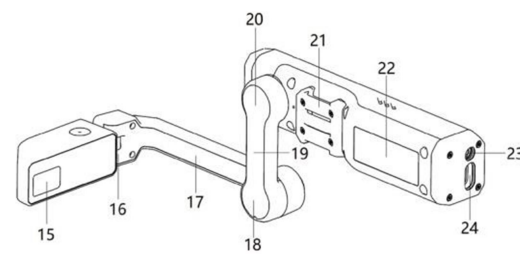


- 15 Display screen
- 16 Wrist joint
- 17 Small arm
- 18 Elbow joint
- 19 Large arm
- 20 Shoulder joint
- 21 Removable clip
- 22 Product label
- 23 Headphone jack
- 24 USB connection

Determining your dominant eye

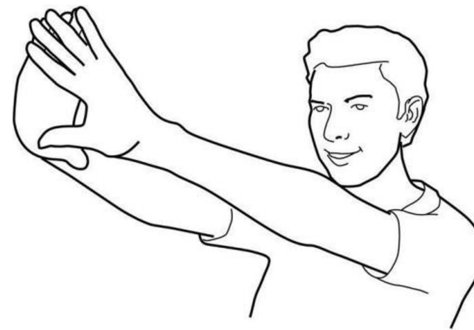

- X Straighten your arms and form a small triangle with your hands placed together.
- X Open both eyes and focus on a distant object in the center of the triangle.
- X Focus at the object in the center of the triangle and close your right eye. If the object is still in the triangle, your left eye is your dominant eye.

- ✗ Keep staring at the object in the center of the triangle and close your left eye. If the object is still in the triangle, your right eye is your dominant eye.
- ✗ If either eye is closed and the object is in a triangle, you do not have a dominant eye, and can use HMD-M200 with either eye.

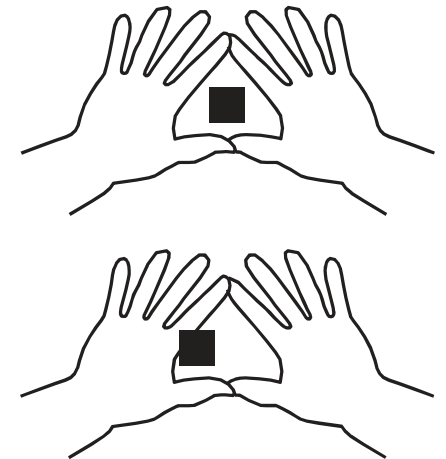

Putting on HMD-M200



- ✗ HMD-M200 can **convert from right eye to left eye dominance** by swinging the boom arm completely around and flipping the device over.
- ✗ Position the display above or **below your dominate eye** and angled so you can see all four corners of the screen.
- ✗ HMD-M200 should be parallel to the ground and slightly higher than the upper part of your ear. You may need to **adjust the tightness of the head strap** or other headgear to keep HMD-M200 in place.

X Hold HMD-M200 steady with one hand while using the other hand to adjust the three positioning joints until **all four corners of the display are visible** and the screen is in focus. This can be done with a naked eye or over glasses.

X The most comfortable position is to make the shoulder and elbow joint **in a "Z" shape**. The display screen should be located above or below the line of sight of the left eye / right eye, which will not block the line of sight facing the front. You will be able to look up or down and see all the contents of the screen.

Before you begin

Fully charge HMD-M200 before you begin setup process.

NOTE: If the device is below 30% charged, it will not allow you to install system updates.



Turn on HMD-M200 by pressing the power button. HMD-M200 will arrive with Chinese as the default language setting. To switch to English, push and hold the rear control button for 2 seconds to access language setup. Then, press rear control button again to switch to desired language.



rear control button

To complete setup, you will need to access the Device Setup app. To do so, say:

“Homepage”


“More Apps”

“Device Setup”

Then, aim the camera on HMD-M200 at the QR code on your computer screen to scan the QR code and complete the configuration process.

Homepage

Say “**Homepage**” to return to this screen at any time.

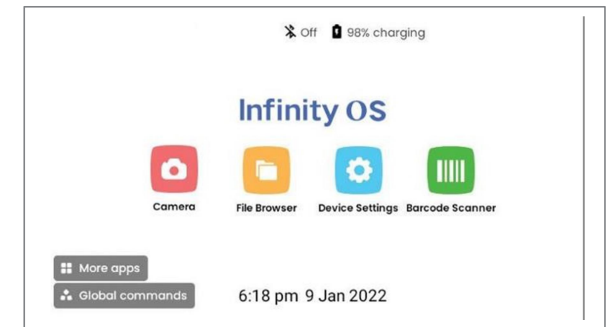

Applications screen

Say “**More apps**” to enter the applications screen.



Global commands

Homepage

Takes user to the home screen

Go back

Takes user back to previous page or closes a menu

Device settings

Brings up basic options and settings

Mute microphone

Mute microphone to ignore all voice commands

Scroll up/down

Scrolls through an open page when appropriate

Global commands


Shows global commands and commands for current screen

Open item “...”

(if any)Opens item in related number bubble

Device settings

Access device settings by saying **“Device settings”**. To edit the settings for your device, say any of the commands listed in bold.

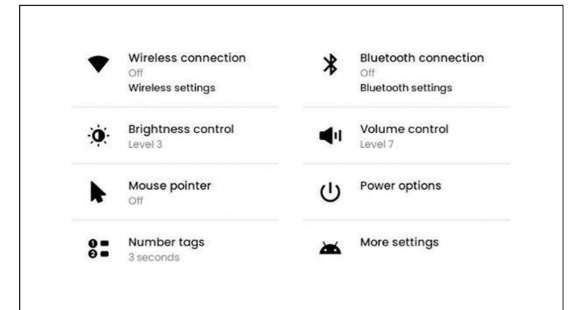


Connecting to wifi

To connect to a specific wireless access point, say **"Wireless settings"** then **"Open item '...'"** to select the item number of the wireless network you want to join. Then follow the instructions on your screen to complete wifi setup. If your network is not listed, say **"Scroll down"** to see additional list items.

To navigate back to your homepage, say **"Homepage"**.

Wireless Update

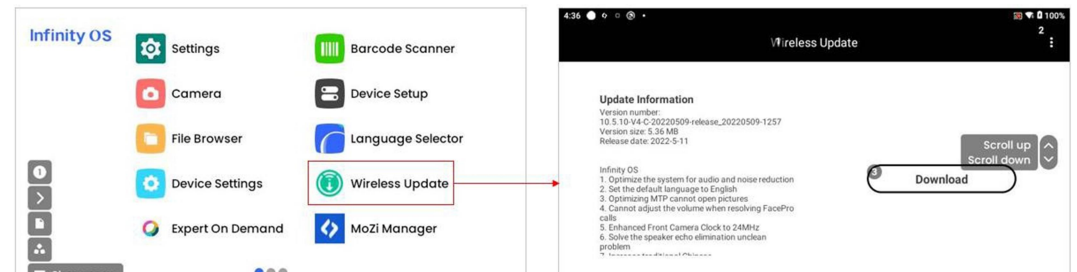

Thank you